EUROPEAN OUTDOORCHEF

GOURMET CHECK DUAL BT

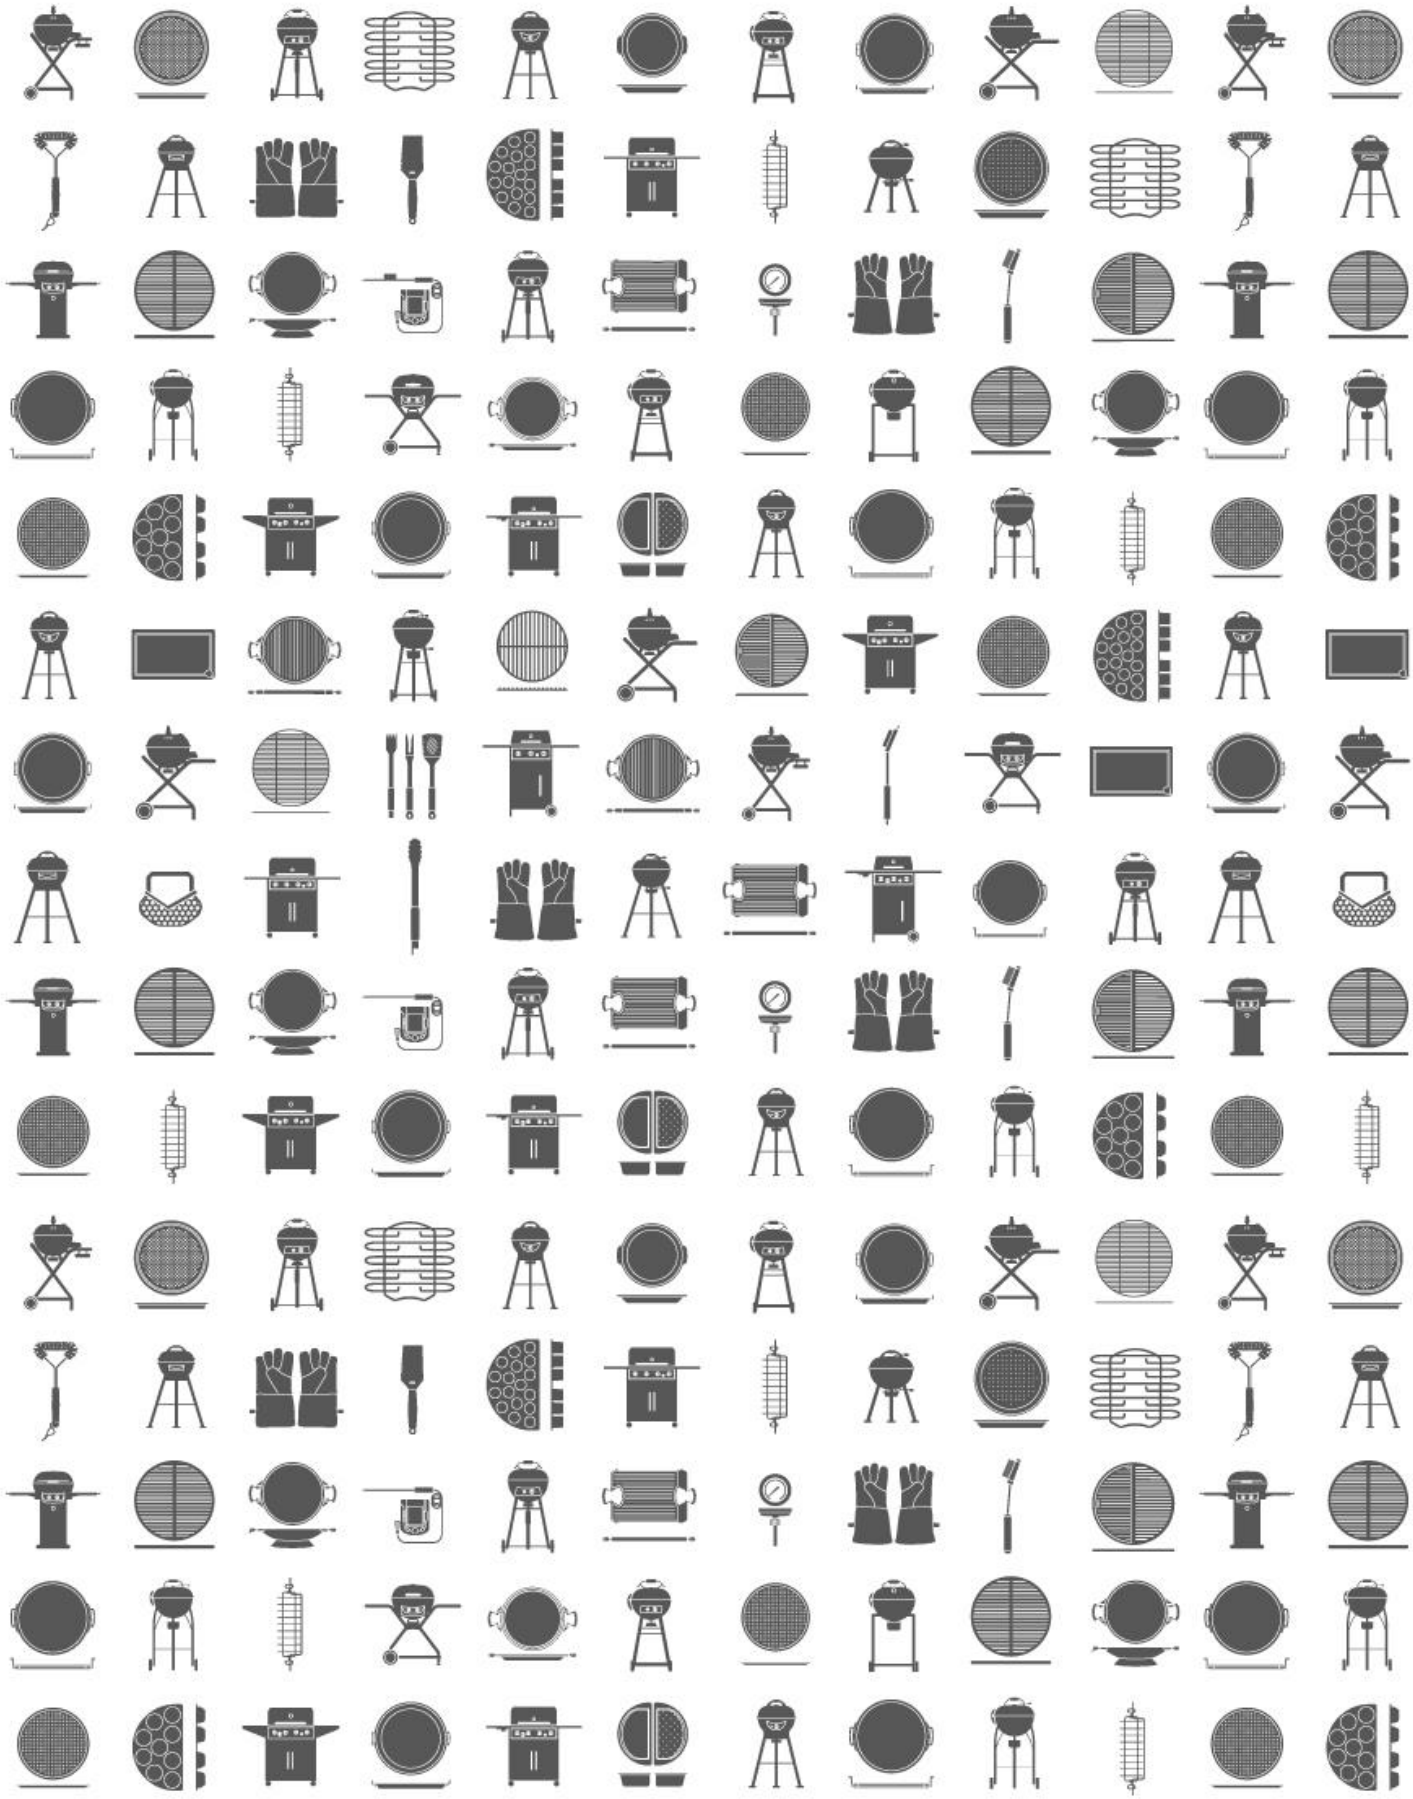

en SAFETY INFORMATION

- Clean the temperature sensor before using it for the first time and after each use
- Remove the plastic cover from the tip of the temperature sensor before use
- Only the metal temperature sensor and the cable should be exposed to high temperatures, but no higher than 300°C/ 572° F (max. 1 hour at 300°C / 572°F)
- The cable must not come into direct contact with flames or activated heating elements in the barbecue
- Do not expose the plastic housing with the battery to either heat or direct sunlight
- Do not bend the metal temperature sensor
- Keep the device away from children
- Do not touch metal components with your bare hands during and shortly after use (risk of burns)
- Do not wash the device in a dishwasher
- Protect the plastic housing from water, moisture and cold
- Do not dismantle the device into its various components

DISPOSAL

This product must not be disposed of with your other household waste. As a consumer, you are obliged to return all old electrical items for professional disposal. Retailers, manufacturers and importers are obliged to take back, free of charge, worn-out electrical items they carry in their range. Recycling of electrical devices preserves natural resources and protects health and the environment. More information on collection points and on the disposal and recycling of electrical devices is available from the Bundesamt für Umwelt (BAFU) [Swiss Federal Office for the Environment], your local waste management operator, the specialist retailer or the manufacturer of the device.

PRODUCT DESCRIPTION

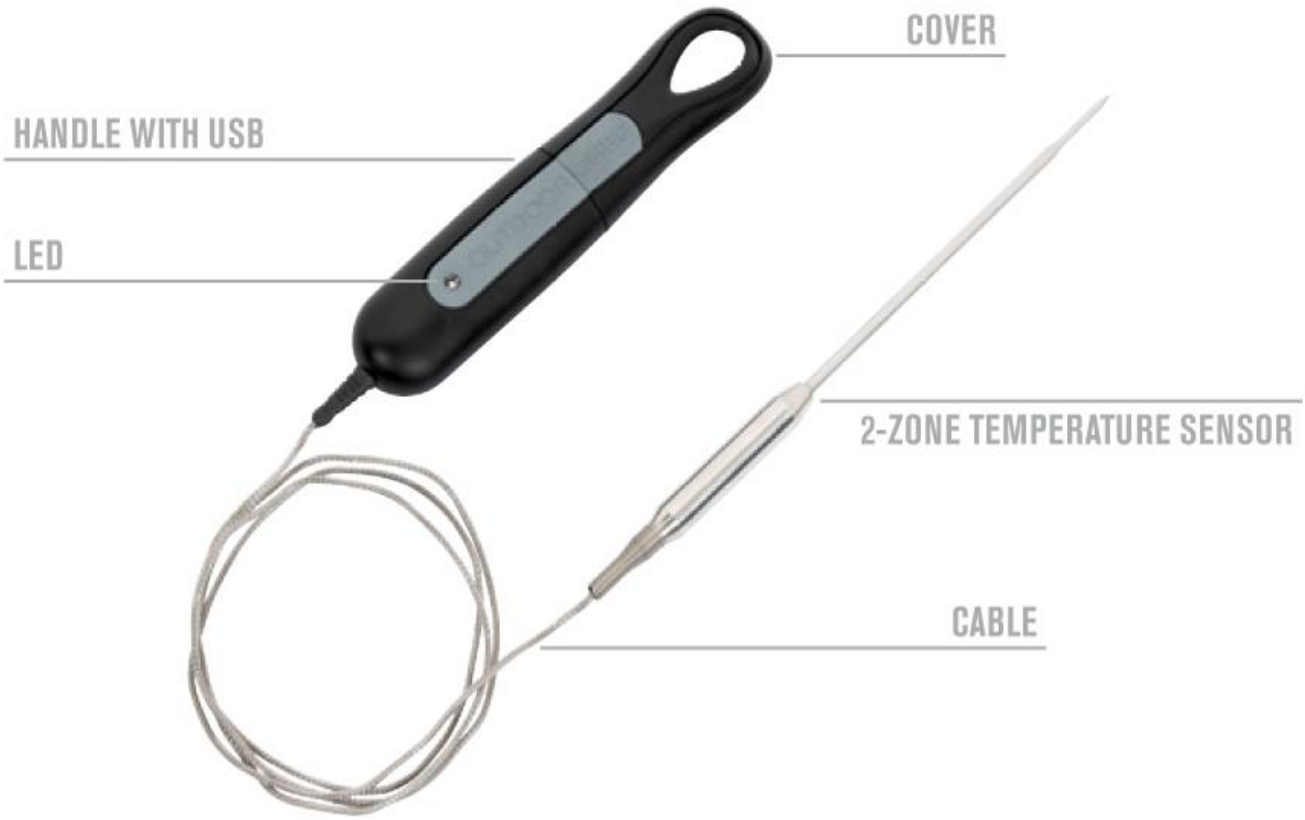

TECHNICAL DATA

- Battery: Integrated rechargeable Li-Po battery
- Connector: Micro USB for charging
- Bluetooth Technology: BLE (Bluetooth 4.0 also called Bluetooth Smart)
- Probe Length & Diameter: 215mm, Ø2.6/4mm
- Measurement Range: 0°C to 300°C
- Certifications: CE

QUICK START

- Download the app at www.outdoorchef.com and follow the online instructions
- Enable Bluetooth on your smartphone
- Shake the handle of the GOURMET CHECK DUAL BT quickly and firmly to start
- The blue LED light will start to flash

BEFORE USING FOR THE FIRST TIME

Please read these instructions carefully before using your GOURMET CHECK DUAL BT.
Rinse the temperature sensor in warm water and remove the plastic cover before use.

REQUIREMENTS

An iOS or an Android device with Bluetooth 4.0 is required to use the GOURMET CHECK DUAL BT.

iOS devices

The GOURMET CHECK DUAL BT is supported by the following iOS devices:

- iPhone X, 8 Plus, 8, 7 Plus, 7
- iPhone SE, 6S Plus, 6S, 6 Plus, 6, 5S, 5C, 5, 4S
- iPod touch (5th and 6th generation)
- iPad 2017, Air 2, iPad Air, iPad (4th. gen.), iPad (3rd gen.)
- iPad mini 4, iPad mini 3, iPad mini 2, iPad mini
- iPad Pro (12.9, 10.5, 9.7 inches)

To be able to use the GOURMET CHECK DUAL BT, iOS Version 9.0 or higher must be installed.

Android devices

The GOURMET CHECK DUAL BT is supported by Android devices with Bluetooth 4.0+ (also called Bluetooth Low Energy (BLE) or Bluetooth Smart). The manufacturers' websites provide information about the Bluetooth capability of their devices.
To be able to use the GOURMET CHECK DUAL BT, Android OS Version 4.3 or higher must be installed.

iPhone, iPod Touch, iPad, iPad Air, iPad mini, iPad Pro are registered trademarks of Apple, Inc.

Android is a registered trademark of Google, Inc.

SWITCHING ON

Shake the GOURMET CHECK DUAL BT quickly and firmly to switch it on. The LED display on the device will flash blue when the GOURMET CHECK DUAL BT is switched on and sending temperature data.

The thermometer will automatically switch itself off again 1 hour after the last shake. Continuous operation is ensured provided the temperature 2 (grill chamber temperature) is above 60° C (140° F).

CONNECTING

To use the GOURMET CHECK DUAL BT, the iOS or Android app must be downloaded from www.outdoorchef.com. Bluetooth must also be enabled in the smartphone or tablet settings. As soon as the GOURMET CHECK DUAL BT is switched on and within range, the app will automatically connect to the device.

CHARGING

The GOURMET CHECK DUAL BT contains a rechargeable lithium-polymer battery. To charge the battery, remove the cover on the end of the handle and use the micro USB cable provided.

A red LED light indicates that the battery is charging. As soon as it is fully charged, the LED will start to flash green. The GOURMET CHECK DUAL BT will operate for around 100 hours with one charge.

TROUBLESHOOTING

No connection

If the app does not detect the thermometer or cannot connect to the GOURMET CHECK DUAL BT, follow the steps described below:

- Make sure the thermometer is switched on (flashing blue light)
- Place the smartphone or tablet close to the thermometer (to ensure it is within Bluetooth range)
- Check that the latest iOS or Android OS version and the OUTDOORCHEF app are installed
- Make sure that Bluetooth is enabled in the device settings
- Restart the smartphone or tablet

Device won't switch on

If you are unable to switch the thermometer on (no blue light appears after shaking the device), follow the steps described below:

- Insert the USB cable to charge the battery
- Check that the thermometer is not damaged

For more information on troubleshooting, visit www.outdoorchef.com.

CONSUMER WARRANTY

As a private end user (consumer) purchasing this OUTDOORCHEF product from an authorised dealer, you are eligible to receive a manufacturer's warranty from DKB Household Switzerland AG („DKB").

The complete terms and conditions of the warranty can be found online at www. outdoorchef.com or sent to you at your request.

The registered brand OUTDOORCHEF is represented by the following enterprise:

DKB Household Switzerland AG
Eggbühlstrasse 28
Postfach
8052 Zürich
Switzerland

www.dkbrands.com
T + 41 44 306 11 21
F + 41 44 306 11 12

BARBECUE CULTURE

DISTRIBUTION

DKB
Welcome home
www.dkbrands.com

DKB Household Switzerland AG | Eggbühlstrasse 28 | 8052 Zürich | Switzerland
DKB Household Benelux B.V. | Brabantsehoek 8 | 5071 NM Udenhout | The Netherlands
DKB Household Austria GmbH | Dueckegasse 15 / Top2 | 1220 Vienna | Austria
DKB Household Germany GmbH | Ochsenmattstr. 10 | 79618 Rheinfelden | Germany

Art.-No. 18.212.59